



ISO 9001 Certified

DNH^{AS}

**N-3770 Kragerø
NORWAY**

Phone: (47) 35 98 56 00
Fax: (47) 35 98 56 10
E-mail: dnh@dnh.no
Web-site: www.dnh.no

 
**DNH WW Ltd.
England**

Phone: (44) 1908 275 000
Fax: (44) 1908 275 100
E-mail: dnh@dnh.co.uk

**DNH GmbH
Germany**


Phone: (49) 0406569 30-0
Fax: (49) 040 6569 30-30
E-mail: dnh@dnh.de

BLC-550(T)

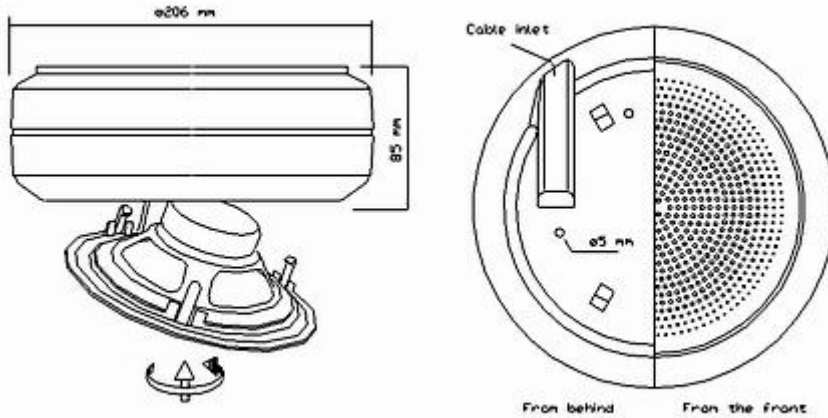

Transformer:
Combined
50/100Volt line
Black : Blue 100 V
Black : Red 50 V

 Secondary nominal
tappings:
common : 4 6,0 W
common : 3 3,0 W
common : 2 1,5 W
common : 1 0,5 W

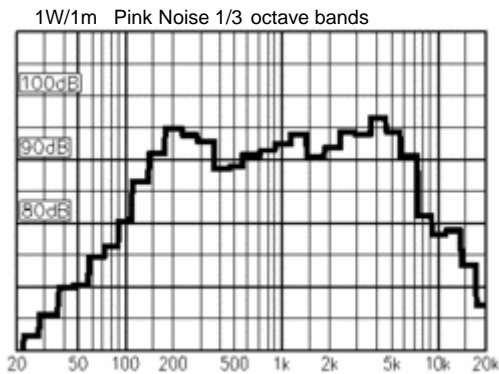

Material/Colour
Mounting
Termination
Weight
IP-rating (UL Equivalent)
Max. / min. amb. temp
Rated / max. power
SPL 1W/1m
SPL rated power
Effective freq. range
Dispersion (-6dB) 1kHz / 4kHz
Directivity factor, Q
Options

ABS/ RAL 9010
Screws(max ø5mm)
Spring clamp
1 kg
0
90°C / -20°C
6W / 6 W
90 db
97 db
150- 15000 Hz
150° / 50°

Installation, Operation and Maintenance Procedures

- | When mounting the loudspeaker please ensure that it is re-assembled in the same manner in which it was received.
- | Screw the cabinet to wall or ceiling, connect cable to terminal and screw the loudspeaker grill clockwise into fixed position.
- | For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- | Do not open loudspeaker when energized.
- | This loudspeaker is supplied with a 2 year warranty against defective workmanship.

Most of our products are available in different colours, impedances and power ratings.

